



MI-TL-LHR-RM-05







TL  
LHR-RM

INSTALLATION MANUAL  
MONTAGEANLEITUNG  
MANUALE DI MONTAGGIO  
MONTERING SANVISNING

MONTAGE ANVISNING  
MONTAGE VEJLEDNING  
ИНСТРУКЦИЯ ПО МОНТАЖУ  
INSTRUKCJA MONTOWANIA

MONTĀŽAS INSTRUKCIJA  
MONTAVIMO INSTRUKCIJA  
MONTAGEHANDLEIDIG  
ASENNUSOHJEET

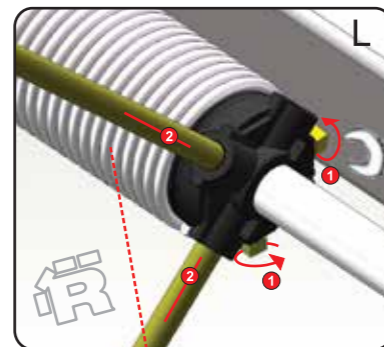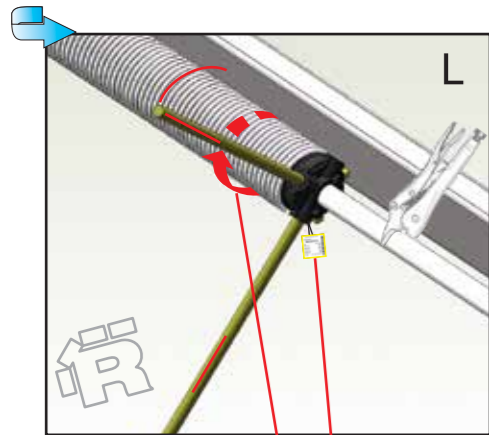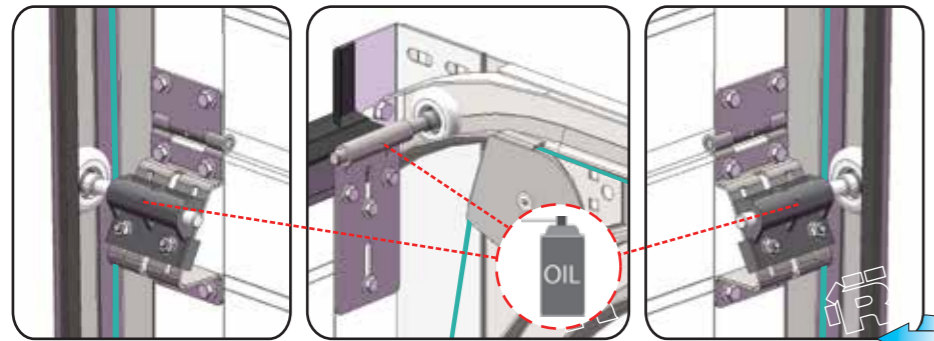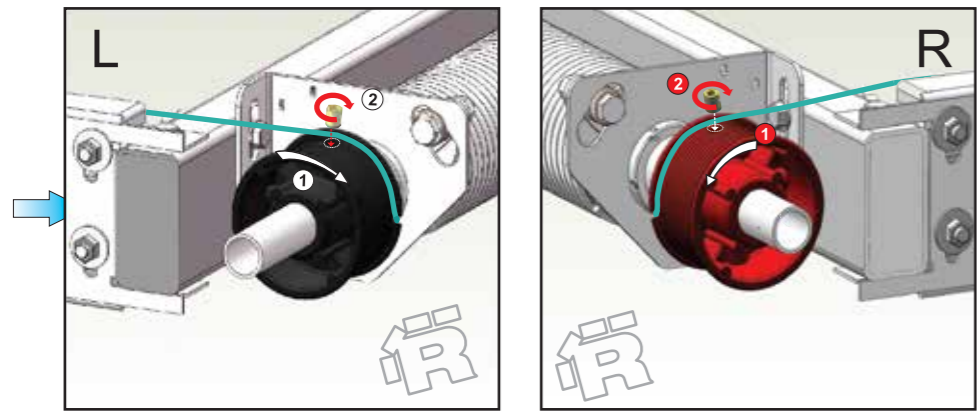

Type  
Width (mm)  
Height (mm)  
Weight (kg)  
Springs Type  
Spring turns  
Springs

XX

