



MI-TLP-VL-02






TLP  
VL

INSTALLATION MANUAL  
MONTAGEANLEITUNG  
MANUALE DI MONTAGGIO  
MONTERING SANVISNING

MONTAGE ANVISNING  
MONTAGE VEJLEDNING  
ИНСТРУКЦИЯ ПО МОНТАЖУ  
INSTRUKCJA MONTOWANIA

MONTĀŽAS INSTRUKCIJA  
MONTAVIMO INSTRUKCIJA  
MONTAGEHANDLEIDIG  
ASENNUSOHJEET

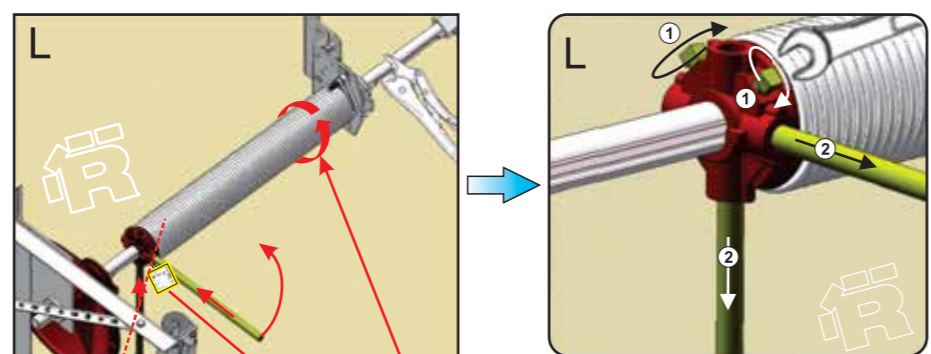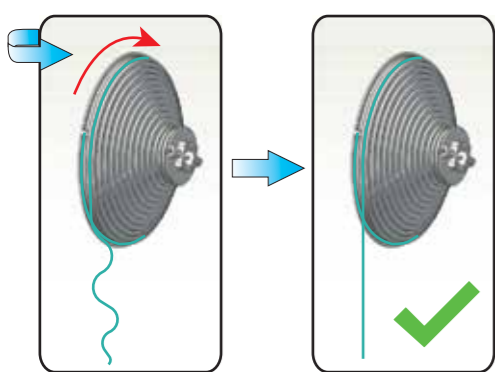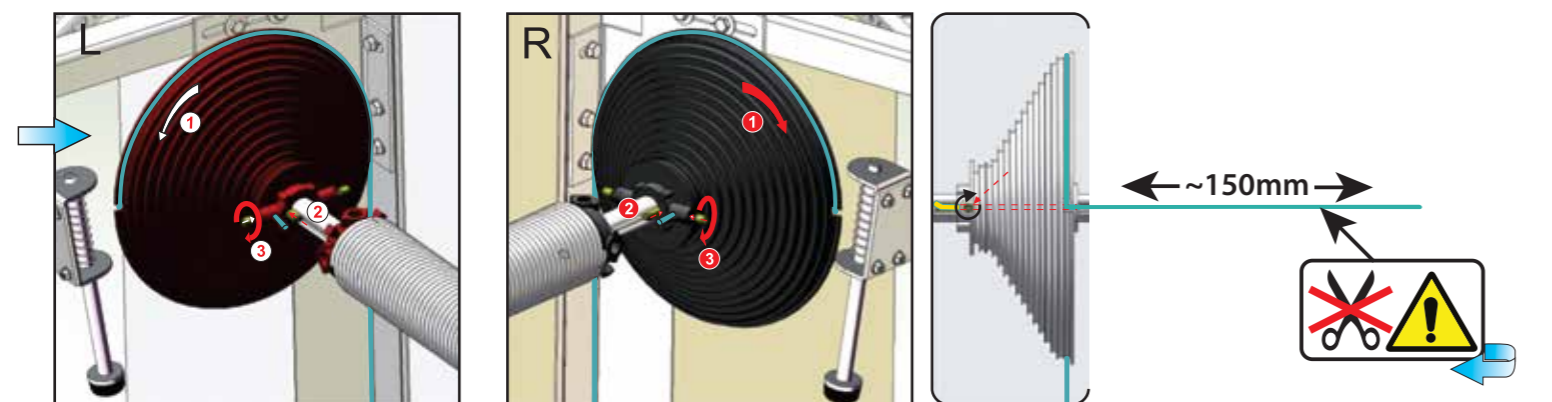

Type	
Width (mm)	
Height (mm)	
Weight (kg)	
Springs Type	
Spring turns	XX
Springs	

